

This manual provides instructions for safe installation of the *InterLock* Kit onto a General Electric (GE) panel. The back plate sits securely on the face of the panel cover while allowing the front plate to slide between the main and generator breaker positions. The *InterLock* Kit will only allow one of these breakers to be in the “ON” position meeting the requirements of Article 702 of the National Electric Code ANSI/NFPA 70. The installation of the breaker retaining strap meets Article 408.36 (NEC 2008).

SAFETY PRECAUTIONS – IMPORTANT SAFETY INSTRUCTIONS

WARNING: HAZARD OF ELECTRIC SHOCK OR EXPLOSION

- This kit must be installed and serviced only by qualified electrical personnel
- Turn off all power supplying the equipment where this kit will be installed before working on or inside the equipment
- Always use a properly rated voltage sensing device to confirm that all power is off
- Replace all devices, doors, and covers after installing this kit before turning on power to the equipment
- Always wear safety eyewear while drilling or working around electrical equipment

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- 1) Disconnect power to the panel
- 2) Separate plates. Remove backing from double stick tape. Align back plate (P-8111) around the opening for the main breaker on the front of the panel cover. See **Figure I** (Do not drill holes at this time)
- 3) Remove panel cover
- 4) Relocate breakers from slots 2, 4 and 6 (top 3 spaces of the right breaker column) utilizing piggyback breakers as necessary to create the needed spaces.
- 5) Install generator breaker in the 2,4 slot leaving slot 6 empty
- 6) Slide the breaker retainer (B-1005) between breakers 3,4 and breakers 5,6 (see figure 4) with the tab pointing toward main breaker to land on breakers 3,4 (see figure 5). Mark hole locations on back of panel. Temporarily remove the breaker retainer and using drill bit (D-1005) provided, drill holes slightly through the back of the panel. Re-insert breaker retainer and fasten to the panel using the two self tapping bonding screws (H-1005) provided. (See figure 6).

- 7) On suitable surface use included 11/64 drill bit (H-8115) to drill holes in the front of the panel cover through the predrilled holes on the back plate (P-8111)
- 8) Use file to smooth surface around holes and remove the burrs on back of panel cover. **On the back of the panel cover file away paint to allow entire screw head to sit with metal to metal contact.** The binder screws (H-8114) must sit flush with the back of the panel cover
- 9) Insert binder screws (H-8114) through the back of the panel cover, back plate (P-8111), and front plate (P-8112). Use the binder post (H-8113) to attach to front of binder screws (H-8114). Handhold binder post (H-8113) while using screwdriver to tighten the binder screws (H-8114). The front plate should slide easily and the back plate should sit firmly. Be careful not to over-tighten.
- 10) Set generator and main breakers in the “OFF” position and reattach panel cover

Figure I



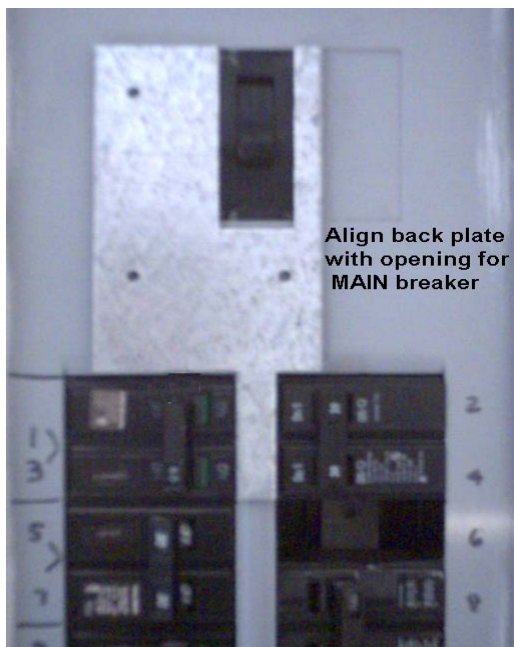


Figure IIA

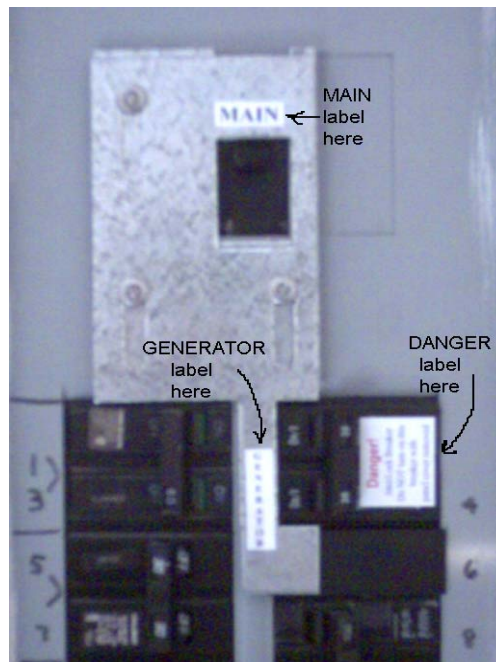

- 11) With the panel cover firmly in place test the *InterLock* to make sure that it transfers easily between positions. **BOTH BREAKERS SHOULD NOT BE ABLE TO BE IN THE “ON” POSITION AT THE SAME TIME.** Even with moderate pressure you should not be able to engage both breakers at once.
- 12) Apply thread lock (H-8117) to all four binder post (H-8113) as per instructions included with the thread lock
- 13) Insert breaker hole filler (H-8116) into 6 slot
- 14) Attach labels as shown in **Figure IIA** and **Figure IIB**
- 15) Reconnect power to the panel

(Figure 4)

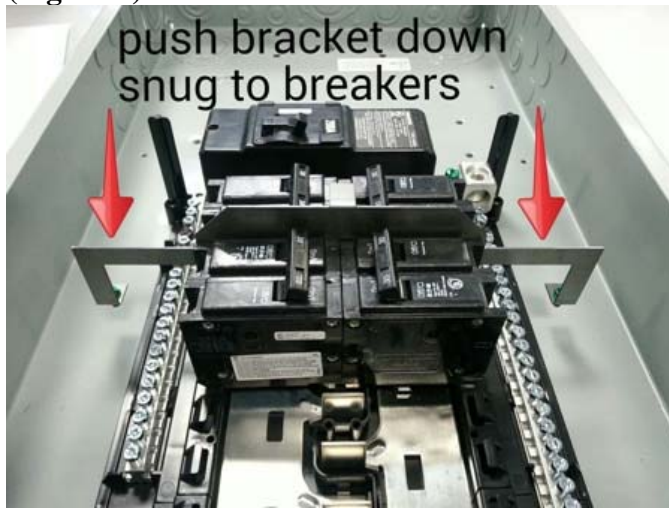

(Figure 5)



(Figure 6)


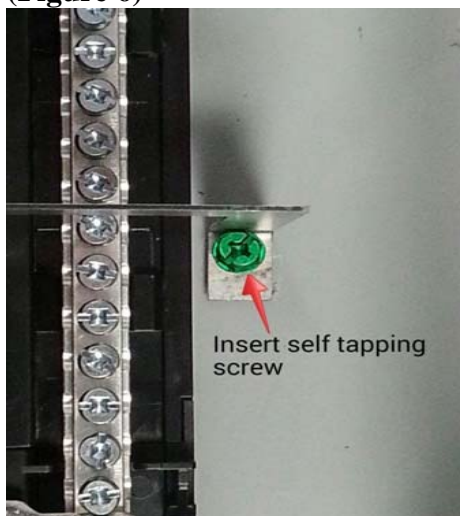


Figure IIB

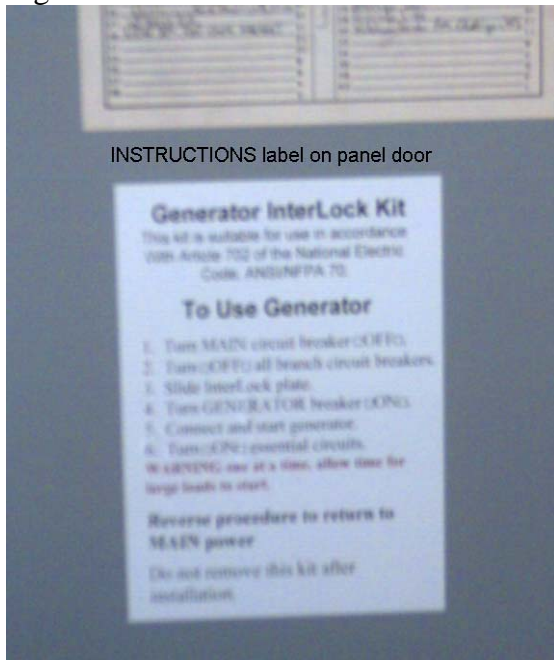

<u>KIT CONTENTS</u>			<u>TOOLS NEEDED TO INSTALL</u>
Description	Quantity	Part #	<ul style="list-style-type: none"> - Drill or cordless drill - Flathead screwdriver - Metal file - Accurate voltage sensor <p><u>CONTACTING US</u></p> <p>You can contact us by phone at (804) 726-2448 or by fax at (804) 231-1984</p> <p>Questions or comments: questions@interlockkit.com</p>
Back plate	1	P-8111	
Front plate	1	P-8112	
Binder post	4	H-8113	
Binder screw	4	H-8114	
Drill bit 11/64	1	D-1005	
Breaker hole filler	1	H-8116	
Thread lock pipette	1	H-8117	
Instruction booklet	1	W-8118	
Main label	1	W-8119	
DANGER label	1	W-8120	
Generator label	1	W-8121	
Instructions label	1	W-8122	
Breaker Retainer	1	B-1005	
Self Tapping Screw	2	H-1005	

OPERATION INSTRUCTIONS

TO SWITCH OPERATION FROM MAIN
TO GENERATOR

- 1) Turn main breaker to the “OFF” position
- 2) Turn all branch circuits to the “OFF” position
- 3) Slide *InterLock* plate up
- 4) Connect and start generator
- 5) Turn generator breaker to the “ON” position
- 6) Turn on essential circuits one at a time **WARNING:** Allow appliances to start before engaging next circuit

TO RETURN TO MAIN POWER
REVERSE PROCEDURE

STATEMENT OF LIABILITY

Electrical equipment should be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Generator InterLock Technologies, LLC for any consequences arising out of the misuse of this material.

CERTIFIED FILE E113647



COMPLIES WITH UL 67